



Scintex

## Follow Setting instructions carefully

1. Deflate a (spare) tyre to you preferred pressure.
2. With lock ring and adjusting cap wound down, screw your tyre deflator on the valve stem making sure it's clean and threads are in good condition.
3. Loosen cap (anticlockwise) until deflator pops open, then immediately tighten cap to the position where air stops exhausting.
4. Turn lock ring up to adjust cap and tighten.

Your tyre deflator is now set to your preferred deflation pressure. Adjustments to your deflators can be made at the rate of 3psi per half turn of the adjusting cap. When the tyre pressure and the deflator setting is within 8psi on one another, a manual start may be required by fitting the deflator then lifting the centre pin to start operation.

**Keep deflators clean and dry.**

**Do not interchange components.**

**Remove after deflation.**

[www.scintex.com.au](http://www.scintex.com.au)